


FRONT LOAD HEAT PUMP DRYER

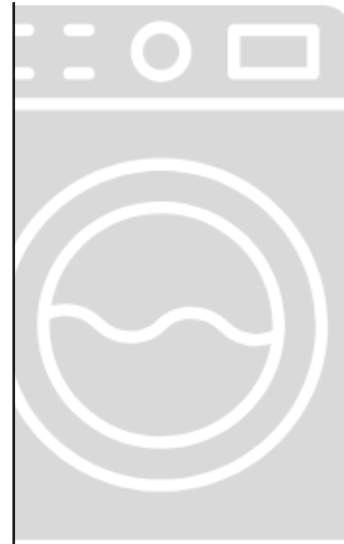

**MODELS:
620-3900**








PLEASE READ THESE INSTRUCTIONS CAREFULLY BEFORE INSTALLING AND/OR OPERATING THIS PRODUCT.

GETTING STARTED

This manual contains important information on the installation, use, and care of your appliance. Please read this manual carefully before installation and operation of this machine to prevent injury and property damage. Warnings and Important Safety Instructions in this manual DO NOT cover all possible conditions and situations that may occur. It is your responsibility to use common sense, caution and care when installing, maintaining and operating your appliance.

SAFETY AND PRECAUTIONS

YOUR SAFETY AND THE SAFETY OF OTHERS ARE VERY IMPORTANT
To prevent injury to the user or other people and property damage, the instructions shown here must be followed. Incorrect operation due to ignoring of instructions may cause harm or damage, including death. The level of risk is shown by the following indications.

-  **WARNING:**
This symbol indicates the possibility of death or serious injury.
-  **CAUTION:**
This symbol indicates the possibility of injury or damage to property.
-  **WARNING:**
This symbol indicates the possibility of dangerous voltage constituting a risk of electrical shock is present that could result in death or serious injury.
-  **WARNING:** For your safety the information in this manual must be followed to minimize the risk of fire or explosion, or to prevent property damage, personal injury or death.
 - Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.
 - Installation and service must be performed by a qualified installer, service agency, or the gas supplier.
-  **WARNING: Fire Hazard**
 - Failure to follow safety warnings exactly could result in serious injury, death or property damage.
 - Do not install a booster fan in the exhaust duct.
 - Install all clothes dryers in accordance with the installation instructions of the manufacturer of the dryer.

WARNING: To reduce the risk of fire, electric shock, or injury to persons when using your appliance, follow basic precautions, including the following:

- Read all instructions before using the appliance.**
- Use this appliance only for its intended purpose as described in this Owner's Manual.
 - Before use, the dryer must be properly installed as described in this manual.
 - ALWAYS follow the fabric care instructions supplied by the garment manufacturer.
 - Do not dry articles that have been previously cleaned in, washed in, soaked in, or spotted with gasoline, dry-cleaning solvents, other flammable or explosive substances as they give off vapors that could ignite or explode.
 - Do not use the dryer to dry clothes which have traces of any flammable substance, such as vegetable oil, cooking oil, machine oil, flammable chemicals, thinner, etc., or anything containing wax or chemicals, such as mops and cleaning clothes. Flammable substances may cause the fabric to catch fire by itself.
 - Do not store or use gasoline or other flammable vapors and liquids near this or any other appliance.
 - Do not allow children to play on or in the appliance. Close supervision of children is necessary when the appliance is used near children.
 - Before the appliance is removed from service or discarded, remove the door of the drying compartment.
 - Do not reach into the appliance if the drum is moving.
 - Do not install or store this appliance where it will be exposed to the weather or freezing temperatures below 33°F.
 - Do not tamper with the controls and latch.
 - Do not repair or replace any part of the appliance or attempt any servicing unless it is specifically recommended in the user maintenance instructions or in published user-repair instructions that you understand and have the skills to carry out.
 - Keep the area underneath and around your appliances free of combustible materials (lint, paper, rags, etc.), gasoline, chemicals and other flammable vapors and liquids.
 - Do not place items exposed to cooking oils in your dryer. Items contaminated with cooking oils may contribute to a chemical reaction that could cause a load to catch fire. To reduce the risk of fire due to contaminated loads, the final part of a tumble dryer cycle occurs without heat (cool down period). Avoid stopping a tumble dryer before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.
 - Packaging material can be dangerous for children. There is a risk of suffocation! Keep all packaging from children.
 - Always check the inside of the dryer for foreign objects before loading laundry. Keep the door closed when not in use.
 - Do not use fabric softeners or products to eliminate static unless recommended by the manufacturer of the fabric softener or product manufacture.

- Clean the lint screen before or after each load.
- Keep the area around the exhaust opening and surrounding areas free from lint, dust, and dirt.
- The interior of the dryer and exhaust should be cleaned periodically by qualified service personnel.
- Do not place items exposed to cooking oils in your dryer. Items contaminated with cooking oils may contribute to a chemical reaction that could cause a load to catch fire.
- This appliance must be grounded. See “Electric Requirements” and “Grounding” in the “Operation Requirements” section.
- This appliance must be properly grounded. Never plug the power cord into a receptacle that is not grounded adequately and in accordance with local and national codes. Refer to installation instructions for grounding this appliance.
- Ensure pockets are free from small irregularly shaped hard objects and foreign material, i.e. coins, knives, pins, etc. These objects could damage your dryer.
- Do not use heat to dry articles containing foam rubber or similarly textured rubber like - materials.

CAUTION:

- Do not sit on top of the dryer.
- Because of continuing product improvements, INVISION reserves the right of change specifications without notice. For complete details, see the Installation Instructions packed with your product before selecting cabinetry, making cutouts, or beginning installation.
- Do not dry clothing with large buckles, buttons, or other heavy metal or solid things.
- Install and use in accordance with the manufacturer’s instructions.
- Do not place items in your dryer that have been spotted or soaked with vegetable oil or cooking oil. Even after being washed, these items may contain significant amounts of these oils.
- Residual oil on clothing can ignite spontaneously. The potential for spontaneous combustion increases when items containing vegetable oil or cooking oil are exposed to heat. Heat source such as your dryer can warm these items, allowing an oxidation reaction in the oil to occur.
- Oxidation creates heat. If this heat cannot escape, the items can become hot enough to catch fire. Piling, stacking, or storing these kinds of items may prevent heat from escaping and can create a fire hazard.
- Take care that children’s fingers are not caught in door when closing it. This may result in injury.

State of California Proposition 65 Warnings:

WARNING: Cancer and Reproductive Harm-www.P65Warnings.ca.gov.

OPERATION REQUIREMENTS

WARNING: Fire Hazard

- Clothes dryer installation must be performed by a qualified installer.
- Install the clothes dryer according to the manufacturer’s instructions and local codes.
- To reduce the risk of severe injury or death, follow all installation instructions
- Save these instructions.

IMPORTANT TO THE INSTALLER

Please read the following instructions carefully before installing the dryer. These instructions should be kept for future reference.

CAUTION:

Remove the door from all discarded appliances to avoid the danger of a child being trapped and suffocating, after unplugging cut off Power Cord.



BASIC REQUIREMENTS

- Make sure you have everything necessary for the proper installation.
- A GROUNDED ELECTRICAL OUTLET is required. Refer to the “Electrical requirements” section.
- A POWER CORD electric dryer (except for Canada).


LOCATION REQUIREMENTS

1. The dryer should be located where there is enough space at the front for loading the dryer and for the exhaust system.
2. Make sure the room in which the dryer is located has enough fresh air. The dryer must be located where there are no air-flow obstructions. Ambient temperature shall not be lower than 33°F.
3. The dryer must not be installed or stored in an area where it will be exposed to water and/or weather. The dryer area must be kept clear of combustible materials, gasoline, and other flammable vapors and liquids. A dryer produces combustible lint. The area around the dryer should be kept lint-free.

Undercounter installation

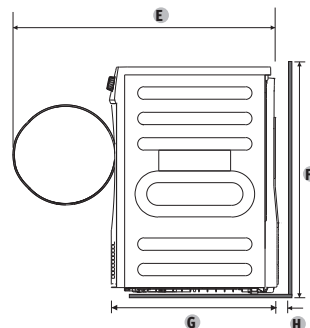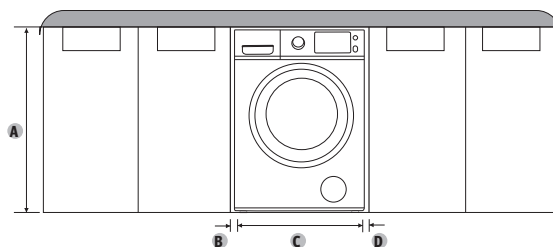

A	≥35.5in.(≥901mm)	D	1 in. (25mm)	G	25.7 in. (653mm)
B	1 in. (25mm)	E	42.2in.(1072mm)	H	2 in. (50.8mm)
C	23.4 in. (595mm)	F	33.5in.(850mm)		

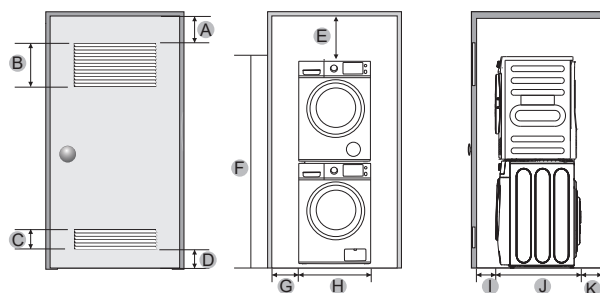

INSTALLATION WITH STACKED WASHING MACHINE AND DRYER

A	3in.(76mm)	E	2in.(50.8mm)	I	3in.(76mm)
B	48in.² (3100mm²)	F	/	J	25.7 in.(653mm)
C	24in.²(1550mm²)	G	1in.(25.4mm)	K	2 in.(50.8mm)
D	3in.(76mm)	H	23.4 in. (595mm)		

NOTE 1


The front of the closet must have two unobstructed air openings for a combined minimum total area of 72 sq.in. (465 sq.cm) with a minimum clearance of 3 in. (76mm) at the top and bottom. A slatted door with equivalent space clearance is acceptable. See Appendix B For Stacking Kit Instructions

DRAIN REQUIREMENTS


DRAIN SYSTEM

The following parts are optional for specific models.

If your dryer has following parts, please wear gloves and install them as per the instruction below.

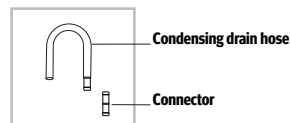

INSTALLATION

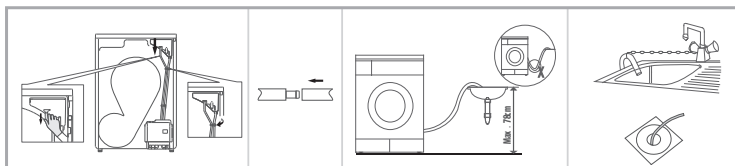

1. Take the hose out of the holder.

2. Disconnect the hose from the water container inflow. (To assure water tightness, there is tension between the hose and the inflow and therefore an increased force is required for disassembly.)
3. Insert the drain hose and the external drainage hose into the connector.
4. Put the hose on the washing basin or floor drain. To assure the smooth drainage, ensure the pipe is not folded.


INSTALLATION INSTRUCTION

REMOVING FROM THE PACKAGE

1. Unpack your dryer and inspect it for shipping damage. Make sure you have received all the items shown below.
2. To prevent personal injury or strain, wear protective gloves whenever lifting or carrying the unit.

WARNING: Packaging materials can be dangerous to children; Keep all packaging material (plastic bags, polystyrene, etc.) well out of children's reach.

PARTS IDENTIFICATION

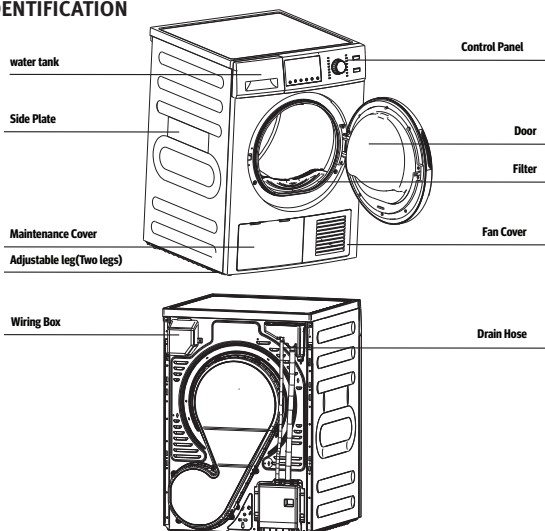

INSTALLATION REQUIREMENTS

Electrical connections

An individual branch (or separate) circuit serving only your dryer is recommended.

DO NOT USE AN EXTENSION CORD.

Electric models - U.S. only

The dryers require a 120/240 volt, 60Hz AC approved electrical service. The electric service requirements can be found on the data label located on the back.

A 30-amp fuse or circuit breaker on both sides of the line is required.

- If a power cord is used, the cord should be plugged into a 30-amp receptacle.
- The power cord is NOT provided with U.S. electric model dryers.

 **WARNING:**




Electrical Shock Hazard

When local codes allow, the electrical supply of the dryer may be connected by means of a new power supply cord kit, marked for use with a dryer, that is UL listed and rated at a minimum of 120/240 volts, 30-amp with three No. 10 copper wire conductors terminated with closed loop terminals, open-end spade lugs with turned up ends, or with tinned leads.

- Do not reuse a power supply cord from an old dryer. The power cord electric supply wiring must be retained at the dryer cabinet with a suitable UL-listed strain relief.
- Grounding through the neutral conductor is prohibited for (1) new branch-circuit installations, (2) mobile homes, (3) recreational vehicles, and (4) areas where local codes prohibit grounding through the neutral conductor. (Use a 4-prong plug for 4 wire receptacles, NEMA type 14-30R.)

INSTALLATION INSTRUCTION

TOOLS NEEDED FOR INSTALLATION

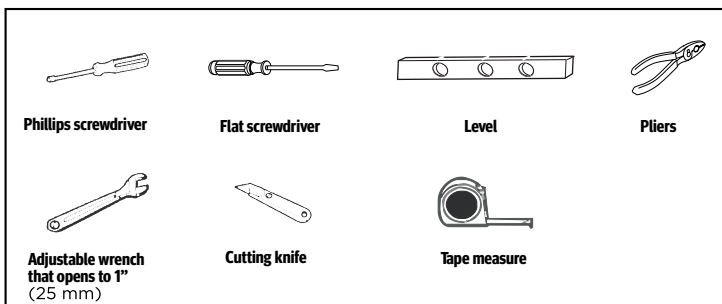

CONNECT THE ELECTRICAL WIRING

Review the "Electric Requirements" section.

BEFORE OPERATING OR TESTING, follow the grounding instructions in the "Grounding".

THREE WIRE OUTLET



3-Wire receptacle (10-30R)


Then choose a 3-wire power supply cord with ring or spade terminals and UL listed strain relief. The 3-wire power supply cord, at least 4 ft. (1.22 m) long, must have 3 10-gauge solid copper wires and match a 3-wire receptacle of NEMA Type 10-30R.

3-Wire system connections

1. Remove the center terminal block screw.
2. Connect the neutral wire (white or center wire) of the power cord to the center terminal screw of the terminal block. Be sure to cross the screw through the ring of the power cord terminal and tighten the screw.
3. Connect the other wires to the outer terminal block screws. Be sure to cross the screw through the terminal ring and tighten the screw.
4. Tighten the strain relief screws
5. Insert the tab of the terminal block cover into your dryer's rear panel slot. Secure the cover with a screw.


3-wire system instructions:

- Center terminal block screw
- External ground connector
- Neutral grounding wire (White)
- Neutral wire (white or center wire)
- 3/4" (1.9cm) UL-listed strain relief

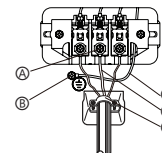

Warning: If converting from a 4-wire electrical system to a 3-wire, the ground strap must be reconnected to the terminal block support to ground the dryer frame to the neutral conductor. Ring-type terminals are recommended. If using strap terminals, make sure they are tightened.

 FOUR WIRE OUTLET



4-Wire receptacle (14-30R)


Then choose a 4-wire power supply cord with ring or spade terminals and UL listed strain relief. The 4-wire power supply cord, at least 4 ft. (1.22 m) long, must have 4 10-gauge solid copper wires and match a 4-wire receptacle of NEMA Type 14-30R. The ground wire (ground conductor) may be either green or bare. The neutral conductor must be identified by a white color.

4-Wire system connections

1. Remove the center terminal block screw.
2. Connect the ground wire (green or unwrapped) of the power cord to the external ground conductor screw.
3. Connect the neutral wire (white or center wire) of the power cord and the appliance ground wire (white) under the center screw of the terminal block. Be sure to cross the screw through the ring of the power cord terminal and tighten the screw.
4. Connect the other wires to the outer terminal block screws. Be sure to cross the screw through the terminal ring and tighten the screw.
5. Tighten the strain relief screws.
6. Insert the tab of the terminal block cover into your dryer's rear panel slot. Secure the cover with a screw.

IMPORTANT: Ring-type terminals are recommended. If using strap terminals, make sure they are tightened.

- Center terminal block screw
- External ground connector
- Green or bare copper wire of the power cord
- Neutral grounding wire (White)
- Neutral wire (white or center wire)
- 3/4" (1.9cm) UL-listed strain relief

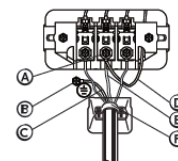

WARNING:



Electrical Shock Hazard
 All U.S. models are produced for a 3-WIRE SYSTEM CONNECTION. The dryer frame is grounded to the neutral conductor at the terminal block. A 4-WIRE SYSTEM CONNECTION is required for new or remodeled construction, mobile homes, or if local codes do not permit grounding through neutral conductor. If the 4-wire system is used, the dryer frame cannot be grounded to the neutral conductor at the terminal block. Refer to the "Electric Requirements" section for 3-WIRE or 4-WIRE SYSTEM CONNECTIONS.
 Remove the terminal block cover plate.
 Insert the power cord with a UL-listed strain relief through the hose provided in the cabinet near the terminal block.

- A strain relief must be used.
 Do not loosen the nuts already installed on the terminal block. Be sure they are tight. Use a 3/8" (1 cm) deep-well-socket.

WARNING:

Electric models
 Dryer must be grounded with 3 or 4 wire cord power cord with ground grounding conductor and a grounding plug, which is sold separately.

- The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.
- Do not modify the plug provided with your dryer - if it doesn't fit the outlet, have a proper outlet installed by a qualified electrician.
- If a power cord is not used and the electric dryer is to be permanently wired, the dryer must be connected to a permanently grounded metal wiring system, or an equipment grounding conductor must be run with the circuit conductors and connected to the equipment grounding terminal or lead on the dryer.



Electrical Shock Hazard
 When local codes allow, the electrical supply of the dryer may be connected by means of a new power supply cord kit, marked for use with a dryer, that is UL listed and rated at a minimum of 120/240 volts, 30-amp with three No. 10 copper wire conductors terminated with closed loop terminals, open-end spade lugs with turned up ends, or with tinned leads.

- Do not reuse a power supply cord from an old dryer. The power cord electric supply wiring must be retained at the dryer cabinet with a suitable UL-listed strain relief.
- Grounding through the neutral conductor is prohibited for (1) new branch-circuit installations, (2) mobile homes, (3) recreational vehicles, and (4) areas where local codes prohibit grounding through the neutral conductor. (Use a 4-prong plug for 4 wire receptacles, NEMA type 14-30R.)

GROUNDING

This dryer must be grounded. In the event of a malfunction or breakdown, the grounding the product will reduce the risk of electrical shock by providing a path of least resistance for the electrical current.

WARNING:

ELECTRIC MODELS
 Certain internal parts are intentionally not grounded and may present a risk of electric shock only during servicing. Service Personnel – Do not contact the following parts while the appliance is energized: inlet valve, control board and temperature-regulating thermistor (located on blower housing).


REPLACEMENT PARTS AND ACCESSORIES

If your dryer requires replacement parts or accessories, contact the dealer where you purchased your dryer or INVISION customer care center at 574.247.9235

LEVEL THE DRYER

To ensure that the dryer provides the optimal drying performance, it must be leveled. To minimize vibration, noise, and unwanted movement, the floor must be a perfectly level, solid surface.


- Adjust the leveling feet only as much as necessary to level the dryer. Extending the leveling feet more than necessary can cause the dryer to vibrate.

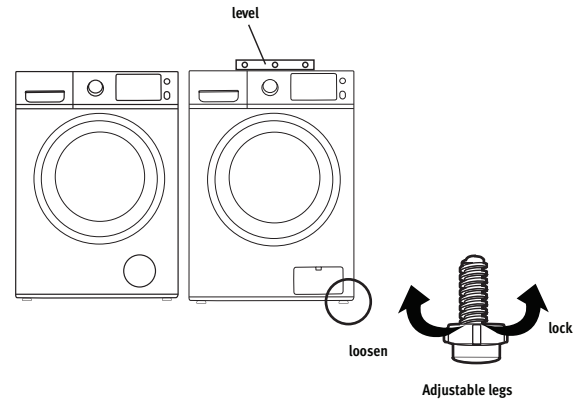

DRYER USE

CONTROL PANEL

WARNING: To reduce the risk of fire, electric shock, or injury to persons, read the IMPORTANT SAFETY INSTRUCTIONS before operating the appliance.

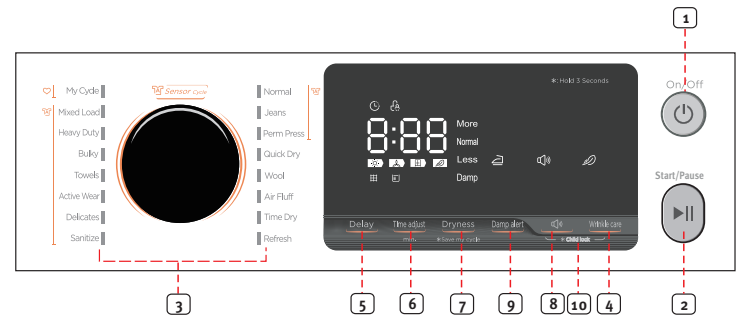

1-Power button

Press to turn your dryer on or into stand-by situation. If your dryer is on for more than 10 minutes without any buttons being pressed, it automatically turns into stand-by situation.

2-Start/Pause button

Press to start or pause the program. You can't change any setting except add a garment.

3-Cycle selector

Select your desired cycle for the type of load. The cycle you select determines the heat control for the cycle. The Normal, Jeans, Perm Press, Quick Dry, My Cycle, Mixed Load, Heavy Duty, Bulky, Towels, Active Wear, Delicates, Sanitize are Sensor cycles. Wool, Air Fluff, Time Dry, Refresh are Manual cycles.

4-Wrinkle care

Press once to add the wrinkle care step into the operating program. Press again to cancel selection. If wrinkle prevent was active, it provides approximately 90 minutes of intermittent tumbling in unheated air at the end of the cycle to reduce wrinkling. The load is already dry, and can be removed at any time during the wrinkle care cycle.

5-Delay

This function is used for delaying clothes drying time within 24 hours. The delay time means the program will start after x hours. When the delay program starts, the time starts to countdown on the display and the delay icon blinks.

6-Time adjust

These buttons are effective only for Manual cycles. Press these buttons to change the drying time you prefer. Push repeatedly to get your desired drying time, including 120 minutes, 90 minutes, 60 minutes, 30 minutes.

7-Dryness

Press the button to select the dry level, including More, Normal, Less, Damp. Different dry level will result in different drying time. For clothes to be ironed manually, a lower dry level should be selected. Press and hold for 3 seconds to remember your favorite drying cycle, this cycle will be "My Cycle".

8-Signal

Press once to stop the buzzer sound. Press again to activate the sound. Your selection will be kept until next pressing.

9-Damp alert

 
 
 

 
 
 
 
This function is useful when you want to take some garments out for ironing. The unit will beep 10s when the moisture in the clothes is good for ironing. At this time, you can take those garments out and continue drying the other by pressing the "START/ PAUSE" button once.

Note: The unit will not stop operating if you don't take those garments out for ironing.





10-Child lock

Press the "Child lock" and "Wrinkle care" together to activate the control lock function. Press again for another 3 seconds to deactivate the function. All buttons except the "Power" will be out of function when control lock activated.

Symbols



 Delay start	 Wrinkle care
 Child lock	 My Cycle
 Clean filter	 Buzzer sound open
 Water tank full (you should empty water tank)	 Damp alert open

    
Cycle phase status

 Means machine was drying with heating air
 Means machine was working with cooling air
 Means it is time to open the door
 Means machine was making wrinkle care


OPERATING INSTRUCTION








DRYING A LOAD OF LAUNDRY




 
 
-  Press this Power button to power your dryer on.
-  Load your dryer.
 - Place only one wash load in your dryer at a time.
 - Mixed loads of heavy and light weight fabrics will dry differently, which may result in lightweight fabrics being dry while heavy fabrics remain damp at the end of a drying cycle.
 - Add one or more similar items to your dryer when only one or two articles of clothing need drying. This improves the tumbling action and drying efficiency.
 - Overloading restricts tumbling action, resulting in uneven drying as well as excessive wrinkling of some fabrics.
- Select the appropriate cycle and options for the load.
 - Select the appropriate cycle by Cycle Selector according to the cycle chart on page 35.
 - Select the appropriate optional function by buttons according to the chart on page 35.



MY CYCLE
HOLD FOR 3 sec. to save

 - Your favorite drying Cycle**
Once you have set the cycle selector and option function, you can push and hold the "My Cycle" button for 3 seconds to memory this setting as your favorite cycle before start the unit. The light beside the knob will flash to confirm the memory with beeps.
 - You can finish this Step by just push the "My Cycle" button once to use your favorite cycle or make some additional change.
-  Start your dryer
Pressing Start/Pause button will start the selected cycle. To PAUSE cycle press Start/Pause button then open the door. To resume operation after closing the door always press Start/Pause. Opening the door during the operation will instantly stop operation and will require to press Start/ Pause button to resume operation.

Cycle	Maximum Amount	Dryness	Delay	Time adjust	Damp alert	Wrinkle care
Normal		Damp Less Normal More	Y	N	Y	Y
Jeans		Damp Less Normal More	Y	N	Y	Y
Perm Press		Damp Less Normal More	Y	N	Y	Y
Quick Dry		Damp Less Normal More	Y	N	Y	Y
Wool	/	/	Y	N	N	Y
Air Fluff	/	/	Y	Y	N	Y
Time Dry	/	/	Y	Y	N	Y
Refresh		/	Y	Y	N	Y
Sanitize		More	Y	N	N	Y
Delicates		Damp Less Normal More	Y	N	Y	Y




Active Wear		Damp Less Normal More	Y	N	Y	Y
Towel		Damp Less Normal More	Y	N	Y	Y
Bulky		Damp Less Normal More	Y	N	Y	Y
Heavy Duty		Damp Less Normal More	Y	N	Y	Y
Mixed Load		Damp Less Normal More	Y	N	Y	Y
My Cycle	/	/	/	/	/	/

* Table in bold is an initial setting. "Y" are all optional functions you can select.

* For even better drying effect, please select higher dry level.

Load Size Recommendations:

For best results, follow the wet load size recommendations noted for each cycle.

-  Small load: Fill the dryer drum with 3-4 items, not more than 1/4 full.
-  Medium load: Fill the dryer drum up to about 1/2 full.
-  Large load: Fill the dryer drum up to about 3/4 full. Do not overload. Items need to tumble freely.

For best results, follow the wet load size recommendations noted for each cycle. For the best performance, the load for each cycle should be recommended as follows:

CYCLE	ITEMS WEIGHT	RECOMMENDED LOAD
Normal	8 lbs	Cotton
Jeans	8 lbs	Jeans
Perm Press	7.5 lbs	Poly/Cotton Blend (easy care)
Quick Dry	2 lbs	Small accounts of clothing
Wool	3 lbs	Wool
Air Fluff	2 lbs	/
Time Dry	8 lbs	/
Refresh	3 lbs	/
Sanitize	5 lbs	Cotton
Delicates	3 lbs	Delicates
Active Wear	5 lbs	Sports clothes, polyester, spandex
Towel	8 lbs	Towels
Bulky	4 lbs	Bedsheet
Heavy Duty	8 lbs	Jeans, sports clothes, skirts
Mixed Load	8 lbs	Polyester and cotton mix

- Unloading your laundry
 - The "Clean filter" will flash 10 sec. when your laundry load is powered on.
 - The dryer will beep 3 times after the cycles done.
 - You should clean the filter after every load once the laundry is unloaded.

NOTE:


- Clothes that are easy to be tangled or worn and small pieces, please put them in the laundry bag to dry.
- Clothes with long belts or ropes, please make a knot to dry.
- Clothes with slender buttons, please button up to dry.
- Clothes with zippers, please zip up and flip to the inside to dry.

Child lock

- This function is useful to prevent children from playing with the unit. Press and hold the "Child lock" and "Wrinkle care" buttons simultaneously for 3 seconds to activate this function. The blue "Child lock" light will turn ON. Press and hold the "Child lock" and "Wrinkle care" buttons simultaneously again for 3 seconds to deactivate this function. The "Child lock" light will turn OFF.
- When this function is activated, all functions will be out of function except the POWER button and DEACTIVATE function above.
 - You can Power ON your unit and set this function then Power OFF. When you do so, even if the unit is powered on, you still cannot start it before the Control Lock function is deactivated.
 - This function will be cancelled automatically if your unit is out of power, such as unplug the unit, power supply out of service, etc.

Empty the water tank:

1. Pull out and hold the water tank with two hands.
2. Transfer the water tank flatly in case of water overflow.
3. Tilt the water tank, pour out the condensate water into the basin.
4. Install the water tank.


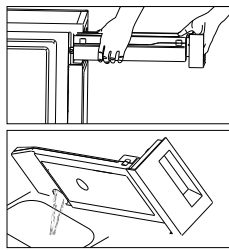


- Empty the water tank after each use. Otherwise, the programme will be paused and the "A" icon will light. After the tank is emptied, the dryer can be restarted by pressing **Start/Pause** button.
- Do not drink the condensate water. Do not use the dryer without the water tank.

Clean Filter

Clean the base filter

1. Open the cover.
2. Unlock three locking levers and grasp the filter handle.
3. Remove the base filter and clean it. If there is too much lint on the filter, clean it in water. Dry the filter thoroughly before installing it back.
4. Clean the rubber sealing, both at the filter and handle.
5. Re-insert the filter.
6. Lock three locking levers and make sure that the levers are in correct lock position.
7. Close the cover until there is a click sound

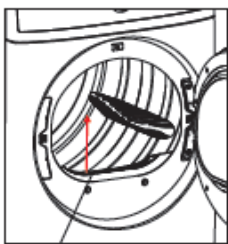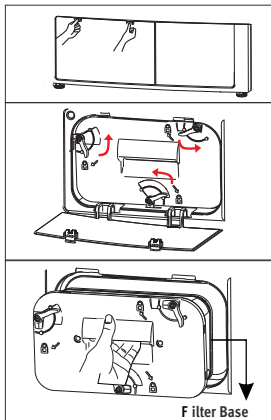

Lint filter



- CAUTION:** To prevent a risk of fire, make sure to clean the lint filter before or after every load;
- To shorten drying time.
 - To operate more energy efficiently.
 - Do not operate your dryer without the lint filter in place. Doing so will damage your dryer.
 - Do not use a damage or broken lint filter. This may reduce performance and/or cause fire.



 
- The lint accumulated on the filter will block the air circulation. Not cleaning the filter regularly will increase drying time and energy consumption.
- Disconnect the power cord before cleaning
- Do not operate the dryer without the filter
- Clean the base filter after each cycle to prevent lint accumulation inside the dryer.

Clean the heat exchanger



Do not touch the heat exchanger with your hand, which may cause an injury.

- As necessary, approx. once every 2 months, remove the lint from the heat exchanger using a vacuum cleaner with a dusting brush attachment.
- Clean the heat exchanger without applying any pressure. Otherwise the heat exchanger could be damaged. The dryer will not dry if the cooling fins are damaged or bent.



Items	Drying Guide
Bedspreads & Comforters	<ul style="list-style-type: none"> • Follow the care label instructions or dry in Bulky cycle. • Make sure the item is thoroughly dry before using or storing. • May require repositioning to ensure even drying.
Blankets	<ul style="list-style-type: none"> • Use the Normal cycle and dry only one blanket at a time for best tumbling action. • Make sure the item is thoroughly dry before using or storing. • May require repositioning to ensure even drying.

Curtains & Draperies	<ul style="list-style-type: none"> • Use the Casual cycle, medium temperature and less dry to help minimize wrinkling. • Dry these in small loads for best results and remove as soon as possible.
Cloth Diapers	Use the Normal cycle on High temperature for soft fluffy diapers.
Down Filled Items (jackets, sleeping bags, comforters, etc.)	<ul style="list-style-type: none"> • Use the Normal cycle on medium temperature. • Add a couple of dry towels to shorten drying time and absorb moisture.
Foam Rubber (rug backs, stuffed toys, shoulder pads, etc.)	<ul style="list-style-type: none"> • DO NOT dry on a heat setting. Use the Air Fluff cycle (no heat). WARNING: Drying a rubber item with heat may damage it or create a fire hazard.
Pillows	<ul style="list-style-type: none"> • Use the Normal cycle. • Add a couple of dry towels and a pair of clean sneakers to help the tumbling action and to fluff the item. DO NOT dry kapok or foam pillows in the dryer. You can dry these items in the dryer as long as you use the air fluff cycle.
Plastics (shower curtains, outdoor furniture covers, etc.)	Use the Air fluff cycle or the Time Dry cycle on the Low or Ultra Low temperature setting depending on the care label instructions.



CAUTION:

- Items NOT to dry:
- Fiberglass items (curtains, draperies, etc.)
 - Woolens, unless recommended on the label.
 - Items spotted or soaked with vegetable or cooking oils.

DRYER CARE



WARNING:

Certain internal parts are intentionally not grounded and may present a risk of electric shock only during servicing. Service Personnel – Do not contact the following parts while the appliance is energized: inlet valve, control board and temperature-regulating thermistor (located on blower housing).

CONTROL PANEL

- Clean with a soft, damp cloth. Do not use abrasive substances.
- Do not spray cleaners directly on the panel.
- The control panel finish may be damaged by some laundry pretreatment soil and stain remover products. Apply such products away from your dryer and wipe up any spills or overspray immediately.

STAINLESS STEEL OR ANODIZED DRUM

- To clean the stainless steel or anodized drum, use a damp cloth with a mild, non-abrasive cleaner suitable for stainless steel and anodized surfaces.
- Remove the cleaner residue and dry with a clean cloth.

DRYER EXTERIOR

- Clean with a soft, damp cloth. Do not use abrasive substances.
- Protect the surface from sharp objects.
- Do not place any heavy or sharp objects or a detergent box on the dryer. Keep them on the purchased pedestal or in a separate storage box. This may scratch or damage the top cover of the dryer.
- Since the entire dryer has a high-gloss finish, the surface can be scratched or damaged.
- Avoid scratching or damaging the surface when using the dryer.

SPECIAL LAUNDRY TIPS

Please follow the care label or manufacturer's instructions for drying special items. If care label instructions are not available, use the fabric care chart in the appendix as a guide.

TROUBLESHOOTING

CHECK THESE SOLUTIONS IF YOUR DRYER...

If your dryer has any problems as followings, you can check as the solutions listed below before making a service call. This will help you save time and money.

PROBLEM	SOLUTION
The unit doesn't start.	<ul style="list-style-type: none"> • Make sure the door is latched shut. • Be sure the power cord is plugged into a live electrical outlet.

	<ul style="list-style-type: none"> • Check the home's circuit breaker and fuses. • Press the Start/Pause button again if the door is opened during the cycle.
The unit doesn't heat.	<ul style="list-style-type: none"> • Check the home's circuit breaker and fuses. • Select a heat setting other than Air fluff and the Temp selection is not on "No heat" • On a gas dryer, check that the gas supply is on. • Clean the lint filter and exhaust duct. • Dryer may have moved into the cool-down process of the cycle.
Doesn't dry.	<ul style="list-style-type: none"> • Check all of the above, plus... • Do not overload. 1 wash load = 1 dry load. • Sort heavy items from lightweight items. • Large, bulky items like blankets or comforters may require repositioning to ensure even drying. • Load may be too small to tumble properly. Add a few towels.
The unit is noisy.	<ul style="list-style-type: none"> • Check the load for objects such as coins, loose buttons, nails, broken zips, etc. Remove promptly. • It is normal to hear the dryer gas valve or heating element cycle on and off during the drying cycle. • Be sure the dryer is leveled properly as outlined in the installation instruction. • It is normal for the dryer to hum due to the high velocity of air moving through the dryer drum and exhaust system.
Clothes are unevenly dried.	<ul style="list-style-type: none"> • Seams, pockets, and other similarly heavy areas may not be completely dry when the rest of the load has reached the selected dryness level. This is normal. Select the Extra Dry setting if desired. • If one heavy item is dried with a lightweight load, such as one towel with sheets, it is possible that the heavy item will not be completely dry when the rest of the load has reached the selected dryness level. Sort heavy items from lightweight items for best drying results.
Shuts off before load is dry.	<ul style="list-style-type: none"> • Dryer load is too small. Add more items or a few towels and restart the cycle. • Dryer load is too large. Remove some items and restart the dryer.
The unit has a special odor.	<ul style="list-style-type: none"> • Household odors from painting, varnishing, strong cleaners, etc. may enter the dryer with surrounding room air. This is normal as the dryer draws the air from surrounding air space of the dryer locations. • When these odors linger in the air, ventilate the room completely before using the dryer.
Odors remain in clothing after refresh	<ul style="list-style-type: none"> • Fabrics containing strong odors should be washed utilizing desired wash cycle.
Garments still wrinkled after Wrinkle prevent	<ul style="list-style-type: none"> • Small loads of 1 to 4 items work best. • Load fewer garments. Load similar-type garments.
Lint on clothes	<ul style="list-style-type: none"> • Clean lint filter before every cycle. • Some fabrics are lint producers (for example, a fuzzy white cotton towel) and they should be dried separately from clothes that are lint trappers (for example, a pair of lack linen pants). • Divide larger loads into smaller loads for drying. • Check pockets thoroughly before washing and drying clothes.

ERROR CODES		
ERROR CODE	POSSIBLE CAUSE	SOLUTIONS
E 32	HUMIDITY	Please contact your local service center if the problem occurs.
E 33	TEMPERATURE SENSOR ERROR	
E 64	MOTOR COMMUNICATION ERROR	
E 82	PCB COMMUNICATION ERROR	

APPENDIX A

FABRIC CARE CHART



The following symbols provide garment care direction. The Clothing care labels include symbols for washing, bleaching, drying and ironing, or dry cleaning when necessary. The use of symbols ensures consistency among garment manufacturers of domestic and imported items. Follow care label directions to maximize.

** The number of dots represent appropriate wash water temperatures for various items. The temperature range for Hot is 105°-125°F/41°-52°C, for Warm 85°-105°F/29°-41°C and for Cold 60°-85°F/16°-29°C.


Wash Cycle	Special Instructions	Warning Symbols for Laundering
Normal	Line Dry/Hang to Dry	Do Not Wash
Permanent Press / Wrinkle Resistant / Wrinkle Control	Drip Dry	Do Not Wring
Gentle /Delicates	Dry Flat	Do Not Bleach
Hand Wash	Heat Setting	Do Not Tumble Dry
Water Temperature **	High	No Steam (added to iron)
Hot	Medium	Do Not Iron
Warm	Low	Dryclean
Cold	Any Heat	Dry Clean
Bleach	No Heat /Air	Do Not Dry Clean
Any Bleach (when needed)	Iron -Dry or Steam Temperatures	Line Dry / Hang to Dry
Only Non-Chlorine (color-safe) Bleach (when needed)	High	Drip Dry
Tumble Dry Cycle	Medium	Dry Flat
Normal	Low	
Permanent Press / Wrinkle Resistant / Wrinkle Control	For machine-washable wool. Loads should be under 8 pounds.	
Gentle /Delicates		

APPENDIX B

Installation Requirements Stacking kit:

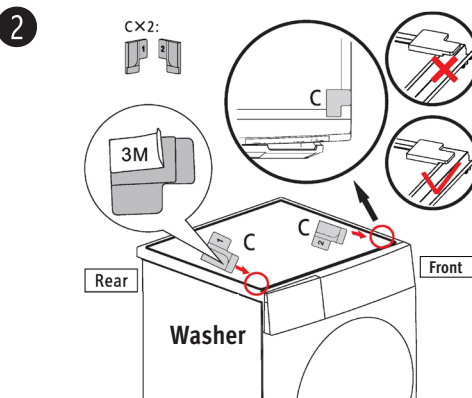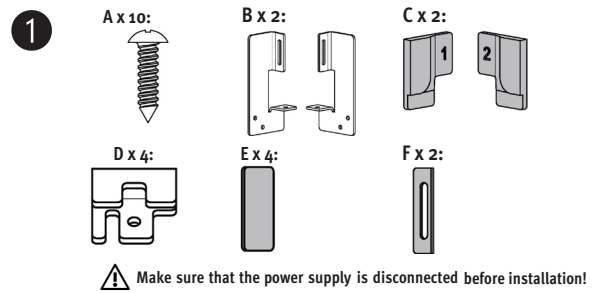


3

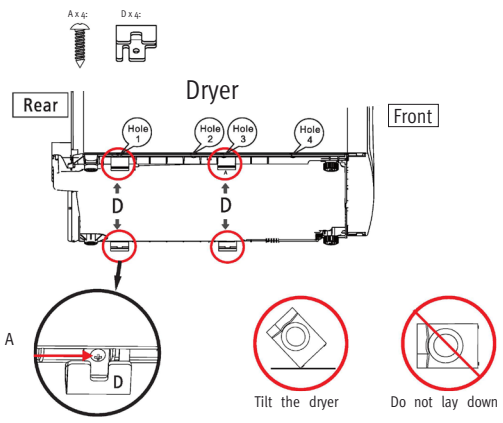


Note: Hole 2 and 4 will not be used.
Tilt the dryer to the side then attach part D underneath. Secure with screw A.
Repeat on both sides.

4

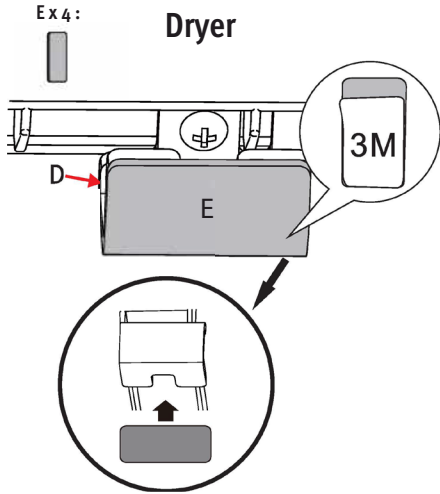


5

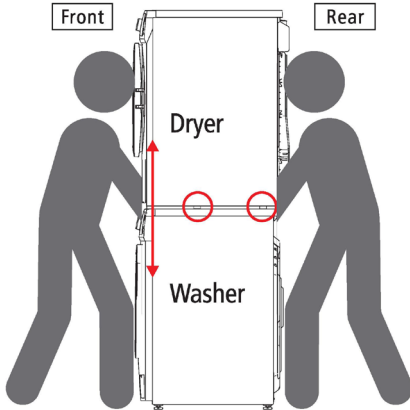


With the help of two people, place the dryer on top of the washer.

6

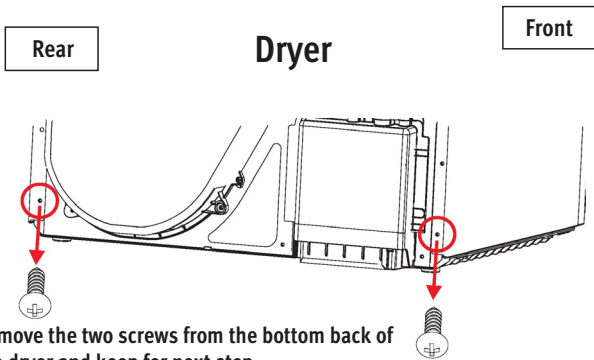


Remove the two screws from the bottom back of the dryer and keep for next step.

7

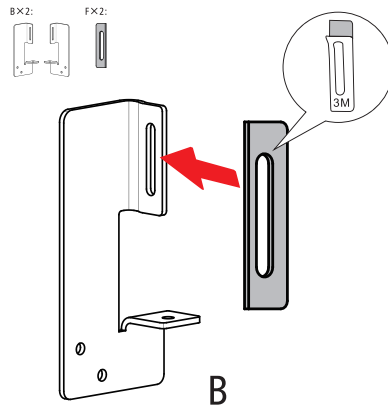


8

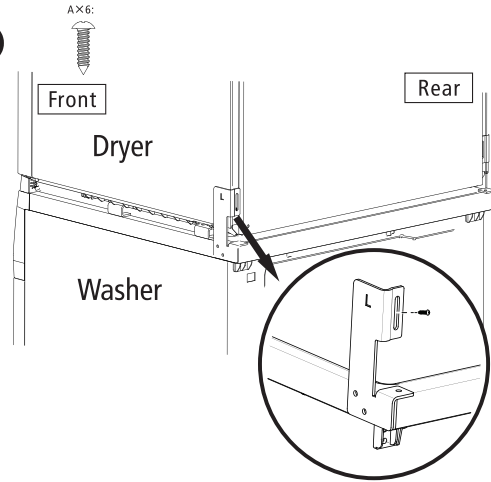

Secure part B to the dryer using screw A.

9

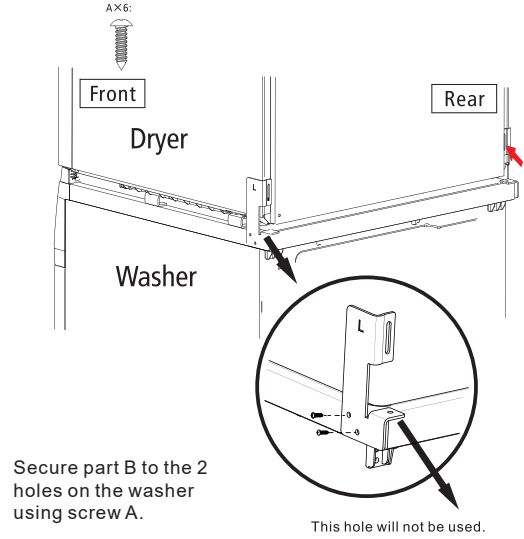

Secure part B to the 2 holes on the washer using screw A.

This hole will not be used.



2525 John Weaver Pkwy, Elkhart, IN 46514
customerservice.invision@airxcel.com | 574.247.9235