SERVICE GUIDE

STACKING KIT

INSTALL REAR AND FRONT STACKING BRACKETS TO TOP OF WASHER

MODELS:
DRYER 620-3910
WASHER 610-3910
STACKING KIT 620-1000

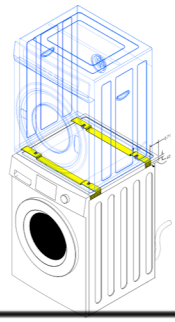

STEP 1: Place the rear bracket with the open side of the foot slot facing the front of the machine.

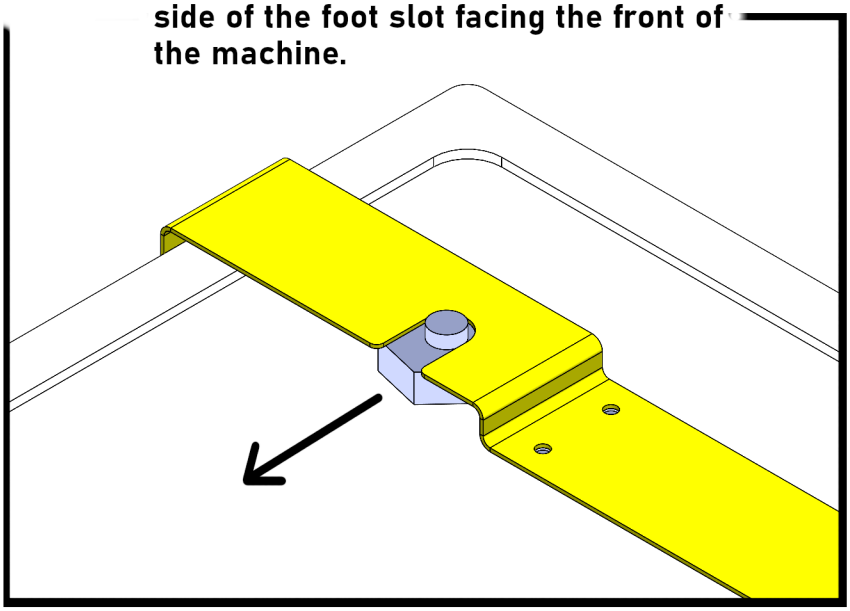

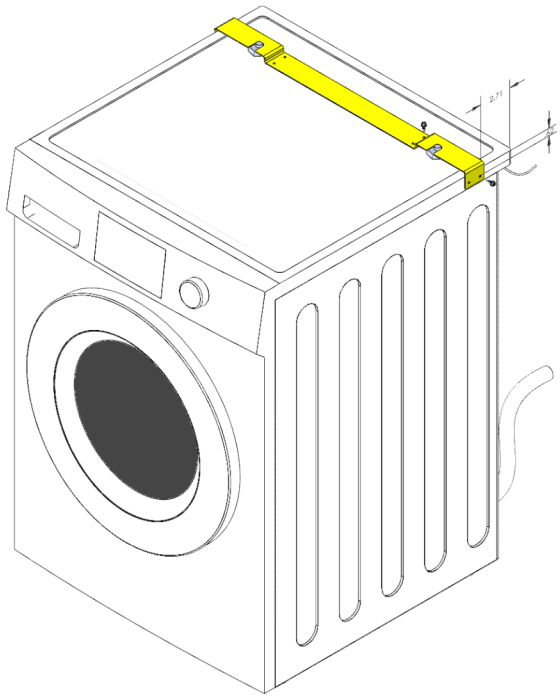

STEP 2: Position the rear bracket so it's rear edge is offset from the the machine's rear edge by 2-3/4".
All side holes to be offset below edge of top to center of hole by 5/8".

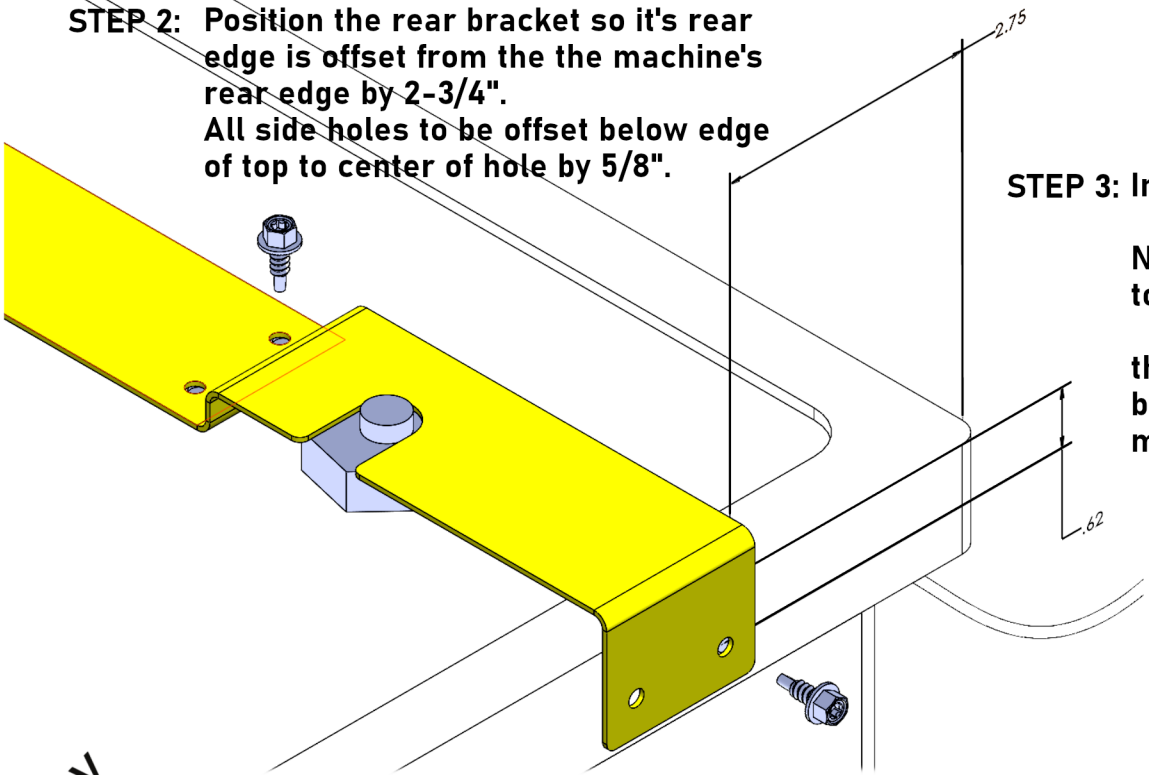

STEP 3: Install 8 of the:

No.8_0.05 inch_T20 torx_self-drilling screws

through the holes in the bracket into the washing machine.

SERVICE GUIDE

STACKING KIT

INSTALL REAR AND FRONT STACKING BRACKETS TO TOP OF WASHER

MODELS:
DRYER 620-3910
WASHER 610-3910
STACKING KIT 620-1000

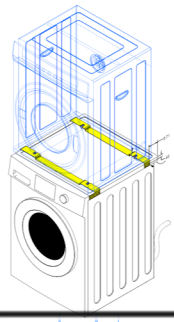

STEP 4: Place the Dryer on top of the Washer and push it toward the rear so the Dryers rear feet slide into and under the rear bracket.

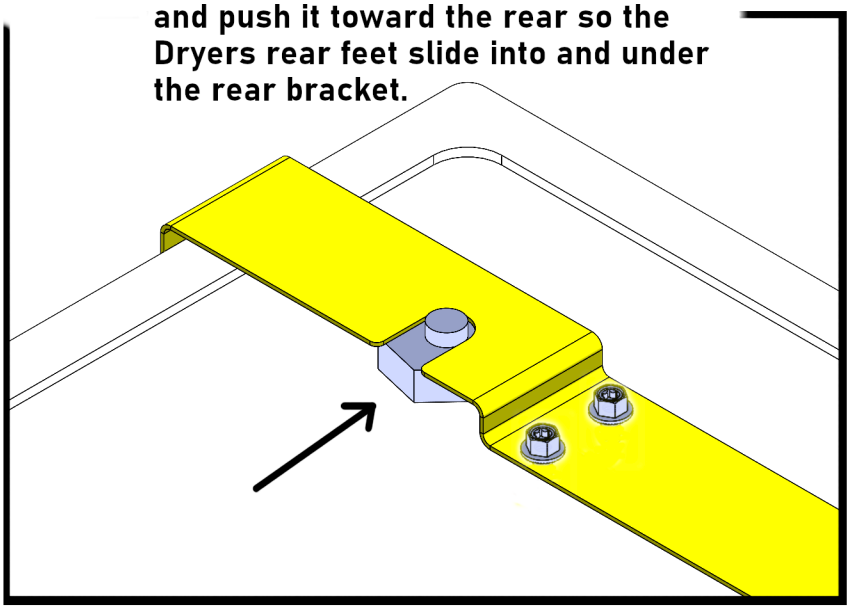

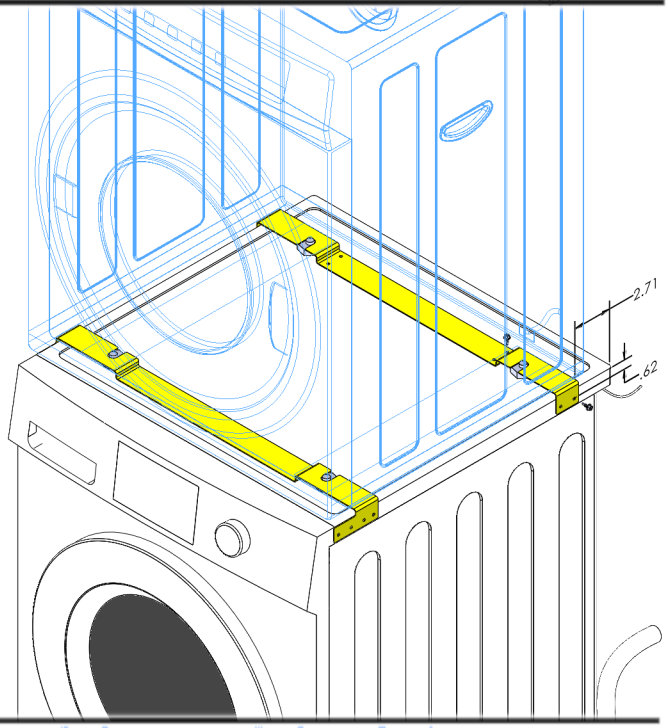

STEP 5: Slide the front stacking bracket under the front of the Dryer, ensuring that the feet slots slide into place as shown below.

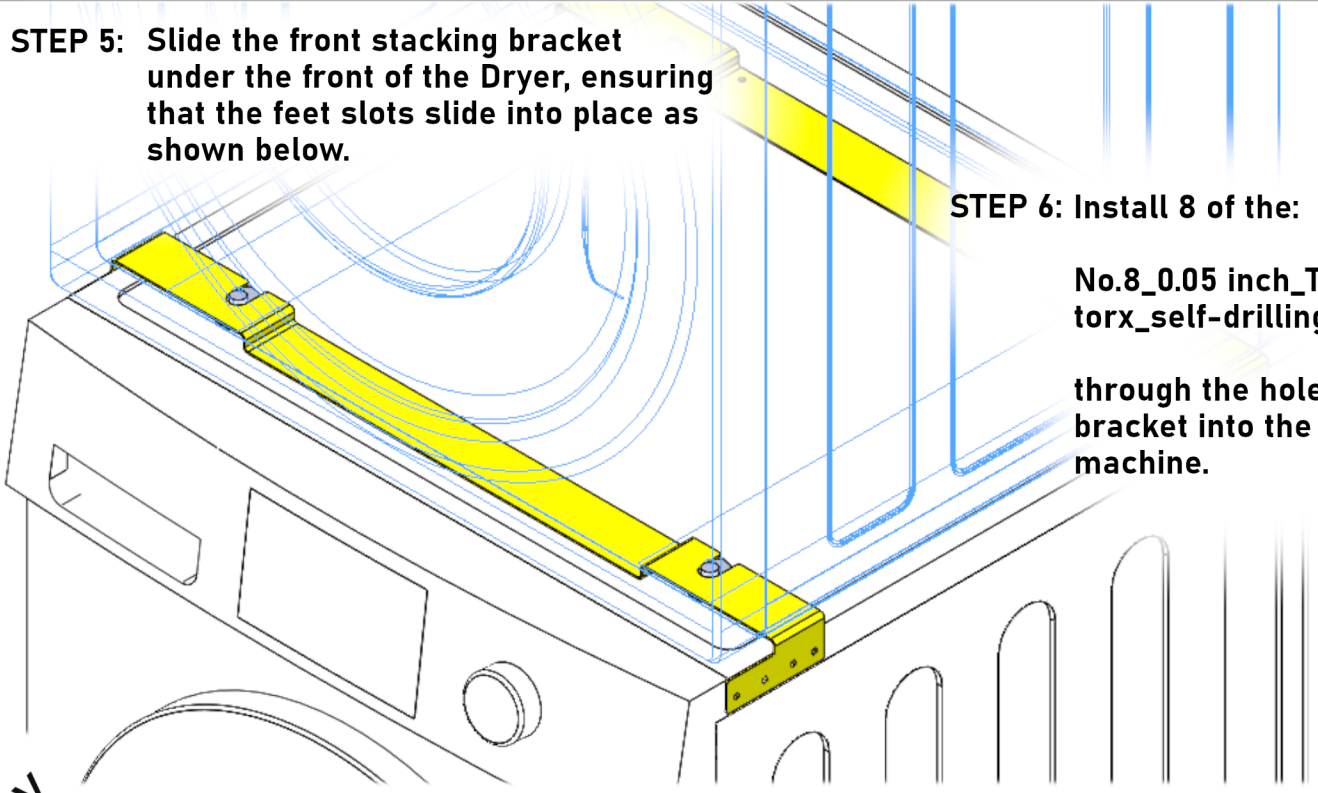

STEP 6: Install 8 of the:

No.8_0.05 inch_T20 torx_self-drilling screws

through the holes in the bracket into the washing machine.